




# Lenovo G780 RAM Replacement

This guide demonstrates RAM replacement and removal for the Lenovo G780.

Written By: Robert Bishop

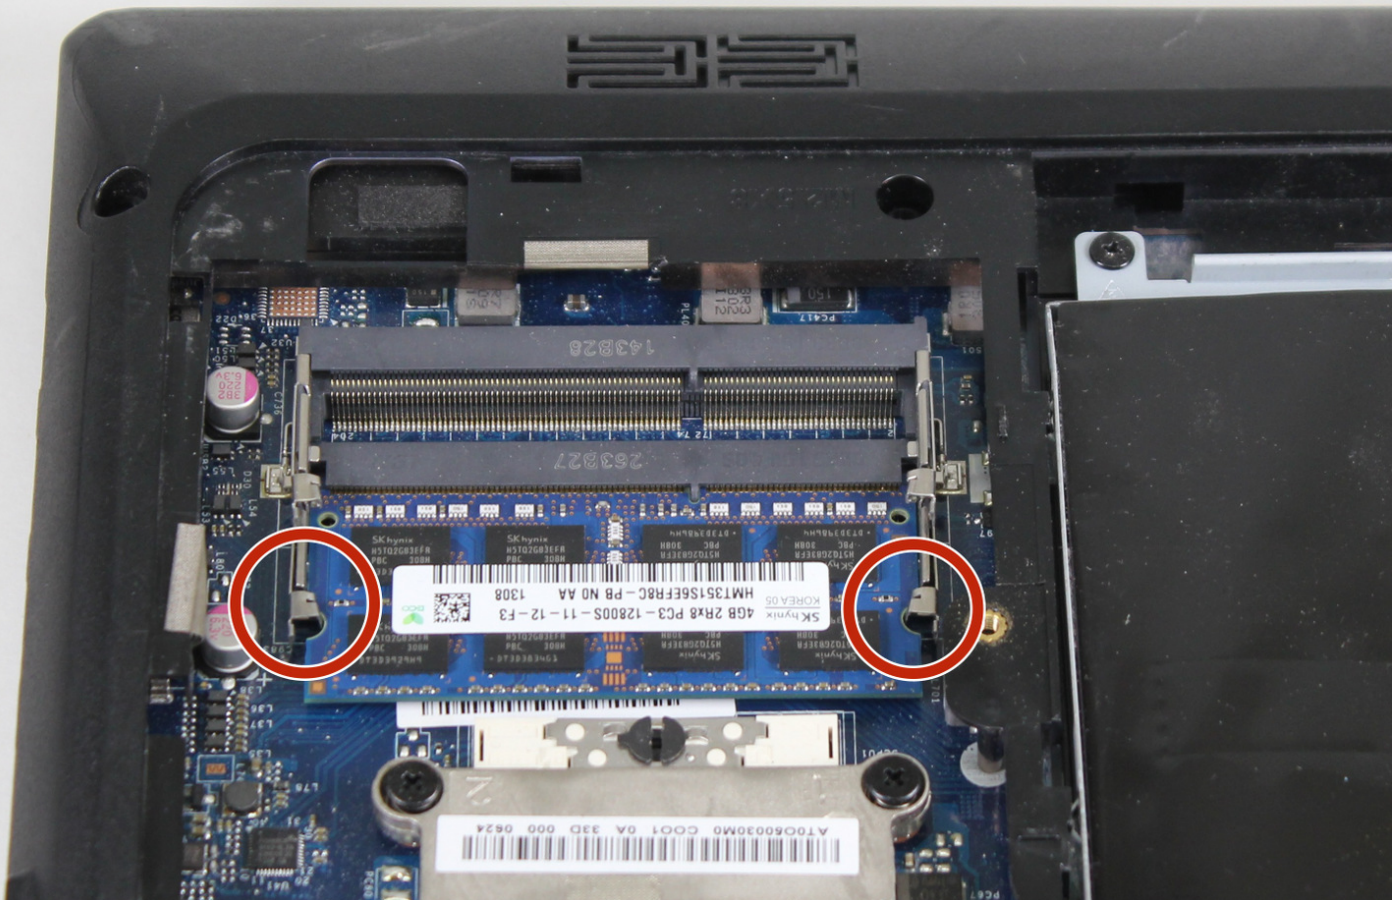

## INTRODUCTION

If you wish to upgrade or replace RAM on the Lenovo G780, follow this guide.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn off the computer.
- Slide the battery-lock switch on the bottom of the laptop to the unlocked position.


## Step 2



- Hold the battery release switch in the unlocked position and remove the battery.



## Step 3 — Back Panel

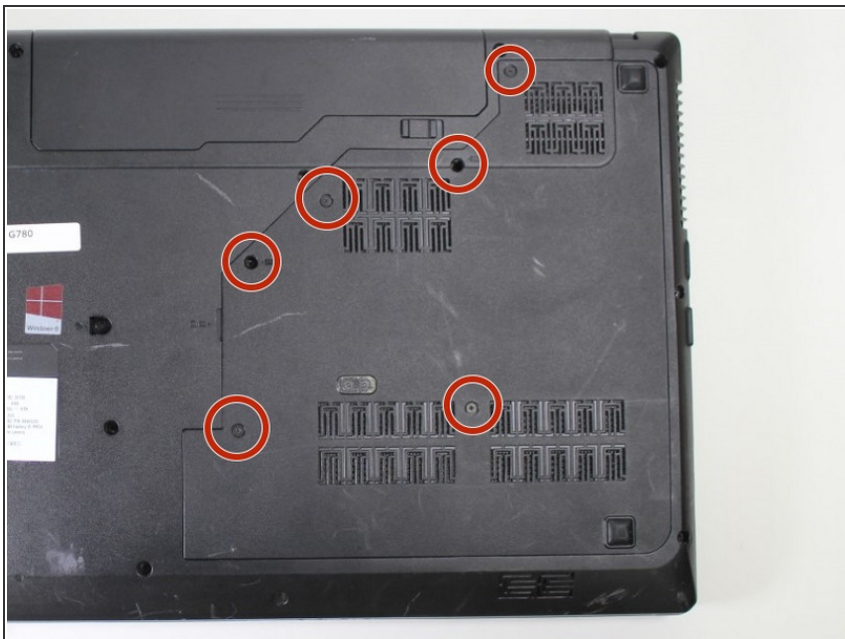

- Using a #0 Phillips screwdriver, remove the six 9mm panel screws from the bottom of the device.

## Step 4



- Remove the back panel.

## Step 5 — RAM



- Push the two locks outwards to release the RAM.
- Carefully pull the RAM module from its socket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-01 03:49:33 PM.